



## The front panel

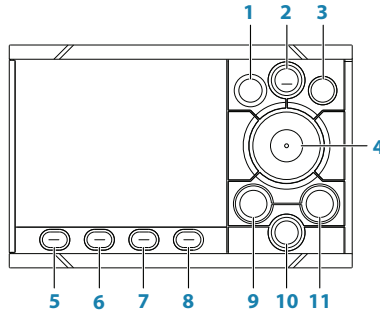

1	<p><b>Power key</b></p> <p>In any mode: Press to show the Display setup dialog. Repeat short presses to toggle preset light levels.</p> <p>In Standby mode: Press and hold to turn the autopilot system to Sleep mode. Re-press the key to re-activate the system.</p>
2	<p><b>MENU</b> key</p> <p>Press once to display the Quick menu.</p> <p>Press twice to show the Settings menu.</p>
3	<p><b>X</b> key</p> <p>Press to return to previous menu level or to exit a dialog.</p> <p>Press and hold to exit the menu system and return to last active mode page.</p>
4	<p><b>Rotary knob</b></p> <p>Menu and dialog operation:</p> <ul style="list-style-type: none"> <li>• Turn to move up and down in menus and dialogs</li> <li>• Turn to adjust a value</li> <li>• Press to select a menu option and to enter the next menu level</li> </ul> <p>In Standby and NFU mode: Press to activate Follow up (FU) mode.</p> <p>In FU mode: Turn to set the rudder angle.</p> <p>In automatic modes: Turn to change the set heading/set course, press to re-activate automatic mode with current heading/course as reference.</p>
5	<p><b>STBY</b> key</p> <p>Press to activate Standby mode.</p>

6	<b>AUTO</b> key Press to activate last active mode (AUTO or NoDrift), and to display the mode pop-up menu. Repeat pressing the key to toggle the pop-up menu options.
7	<b>NAV</b> key Press to activate Nav (Navigation) mode.
8	<b>WORK/Thruster</b> key Press to display work profile options. Repeat short presses to toggle the work profile options. Press and hold to activate or de-activate the thruster.
9 and 11	< and > (port and starboard) keys In Standby and FU mode: Press to activate Non-Follow Up (NFU) steering. In automatic modes: Press to change the set heading/set course to port or to starboard.
10	<b>Turn</b> key Press to display the Turn-dialog.

## The autopilot page

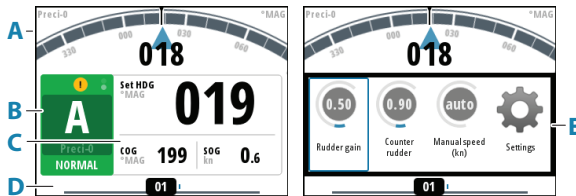
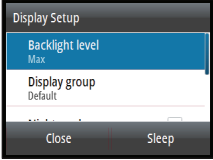


The autopilot page includes:



- **A:** Heading repeater
- **B:** Status panel
- **C:** Mode info panel
- **D:** Rudder bar
- **E:** Quick menu - displayed by pressing the MENU, WORK/Thruster or the TURN key

Icon	Description
	Active thrusters
	Active alarm
	Active warning
	Picture freeze indicator


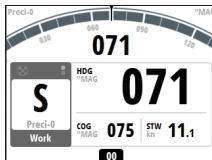

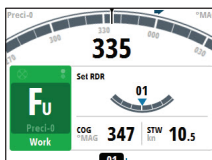
# The power/light key



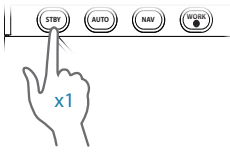


	<ul style="list-style-type: none"> <li>Press and hold: Sleep</li> </ul>	
	<ul style="list-style-type: none"> <li>Single press: Display setup</li> </ul>	
	<ul style="list-style-type: none"> <li>Repeated presses: Wake up from sleep mode</li> </ul>	
	<ul style="list-style-type: none"> <li>Repeated presses: Toggle preset brightness levels</li> </ul>	

# Taking command

	<p>Press any mode key to take command.</p>
	<p>The passive icon is shown in the mode indication field on passive control units.</p>


# Autopilot modes

Mode	Activate	Mode display	Rotary knob	PORT/ STBD keys
<b>STBY</b>			No action.	Switch to NFU mode.
<b>NFU</b>	Press the port or starboard key when in STBY or FU mode.		No action.	Adjust the rudder angle.
<b>FU</b>	Switch to FU mode from STBY mode or NFU mode by pressing the rotary knob.		Adjust the set rudder angle.	Switch to NFU mode.

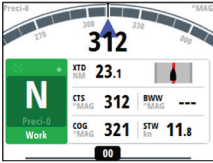Mode	Activate	Mode display	Rotary knob	PORT/ STBD keys
<b>AUTO</b>				Adjust the set heading.
<b>NoDrift</b>	Switch to NoDrift mode by pressing the <b>AUTO</b> key to display the Auto/NoDrift pop-up. Then repress the <b>AUTO</b> key to highlight the NoDrift option.			Adjust the set course.
<b>NAV</b>	 <i>Note:</i> NAV mode requires a compatible navigator (e.g. Navico MFD) connected.			No action.

## Alerts


### Acknowledging an alert

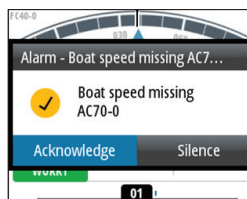

The most recent alert is acknowledged by pressing the rotary knob. This removes the alert notification, and silences the alert from all units that belong to the same alert group. A reminder reappears at given intervals for as long as the alert condition exists.

There is no time-out on the alert message or siren. An alert remains active until you acknowledge it or until the reason for the alert is removed.

### Displaying alert listing





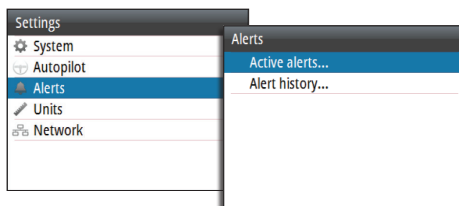


# Menus

## Settings menus




Menus used for installation and system setup.  
Activated by pressing the **MENU** key twice.

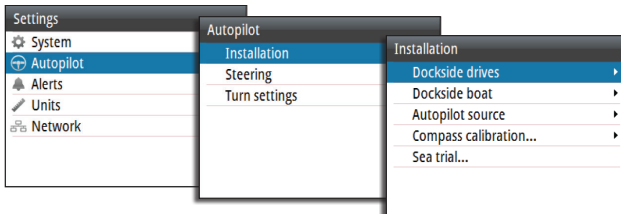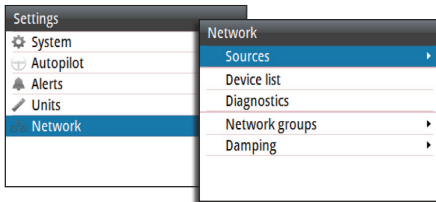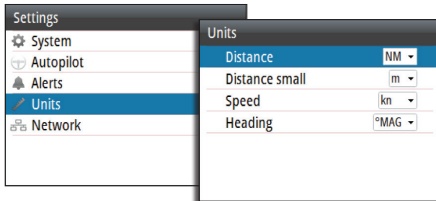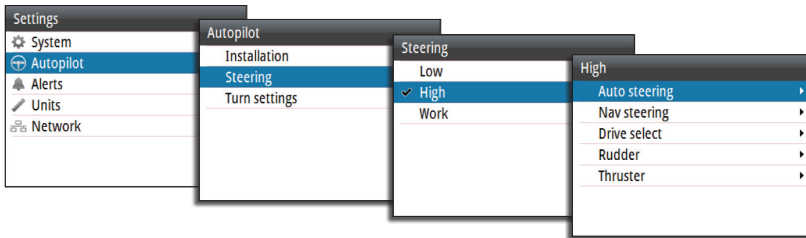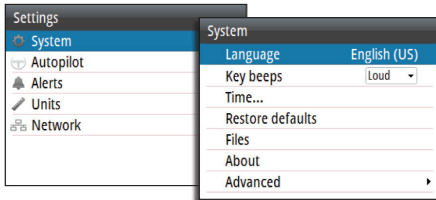

## Thrusters on/off

Press and hold the **WORK**/Thruster key to toggle the thrusters on/off.

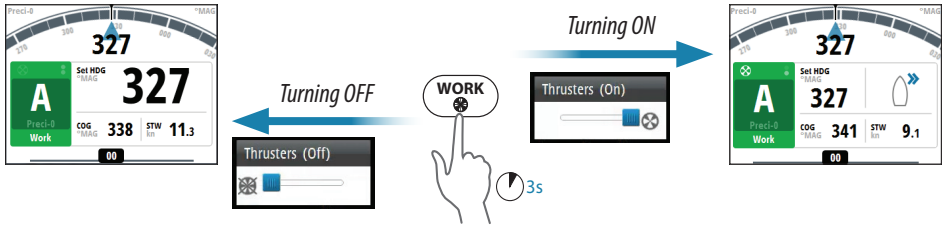

## Selecting work profile

Press the **WORK**/Thruster key to display the WORK profile quick menu. Repeat pressing the **WORK**/Thruster key or use the rotary knob to select preferred profile.

