



# FA-50

# CLASS B AIS TRANSPONDER



# The FA-50 offers accurate information for collision avoidance



FURUNO's FA-50 class-B AIS transponder receives navigation data from AIS-equipped vessels nearby that can be utilized to aid in safe navigation. Also, the FA-50 transmits own ship's information to the vessels around, which also aids in collision avoidance.

AlS utilizes a VHF data link to exchange own ship information with other AlS-equipped vessels around. The FA-50 incorporates the received AlS information into radar, a chart plotter and other graphic display options such as a PC to improve situational awareness. AlS targets on the screens are

shown with SOG/COG vector, which greatly assists you in grasping the surrounding situation even in the midst of congested waterways. Also, Closest Point of Approach (CPA) and Time to Closest Point of Approach (TCPA) can be computed and displayed on the radar/chart plotter screens.

The FA-50 feeds AIS data to the NavNet 3D and vx2 series or a PC with FURUNO's AIS Viewer software interfaced through Ethernet. The FA-50 can also be interfaced with a FURUNO chart plotter and radar via NMEA 0183 format to supplement information to the onboard navigation system.

# exchange that can be utilized

#### What is AIS?

The Automatic Identification System (AIS) improves the safety level of boating by exchanging information about the status of your ship with other AIS-equipped craft nearby. The system utilizes VHF broadcasts to handle information about the surrounding area, such as other craft and buoys and other aids-to-navigation.

The AIS data includes target position, course and speed over ground, allowing you to foresee the course changes of particular targets. AIS targets are constantly visible even when they are shrouded in fog, in darkness, behind headlands, river bends or other obstructions.

# Comparison between Class-A and Class-B

		Class-A		Class-B
Ę	Vessel applied	SOLAS vessel		Non-SOLAS vessel
	Access scheme	ss scheme SOTDMA (Self Organized Time Division Multiple Access)		CSTDMA (Carrier Sensing Time Division Multiple Access)
		Reserves a particular time slot and negotiates the use of that time slot with other Class-A vessels within radio range.		Uses any time slot as and when it is available. If no slot is available, Class-B AIS tries to access to the slot again after a pre-set time.
	Frequency Range	uency Range 156.025 - 162.025 MHz		156.025 - 162.025 MHz (Same as Class-A)
i	Update Interval	Variable by ship speed and course		2-step fixing by ship speed
į		Ships status "at anchour" and not moving faster than 3 kt	3 min.	Moving less than 2 kt: 3 min. Moving faster than 2 kt: 30 sec.
		Ships status "at anchour" and moving faster than 3 kt	10 sec.	
		Ships operating in SOLAS mode, moving 0 - 14 kt	10 sec.	
THE STATE OF		Ship operating in SOLAS mode, moving 0 - 14 kt and changing course	3 1/3 sec.	
		Ship operating in SOLAS mode, moving 14 - 23 kt	6 sec.	
ANNARY SE		Ship operating in SOLAS mode, moving 14 - 23 kt and changing course	2 sec.	
Walley.		Ship operating in SOLAS mode, moving faster 23 kt	2 sec.	
		Ship operating in SOLAS mode, moving faster 23 kt and changing course	2 sec.	

- ▶ Fully satisfies the technical standards for Class-B AIS, IEC 62287-1
- ▶ Receives both Class-A and Class-B AIS information
- ▶ Enhances safe navigation by exchanging critical navigation information from AIS-equipped vessels nearby
- Greatly improves the level of the situational awareness even in fog, darkness or congested waterways
- Outputs data to NavNet 3D, NavNet vx2 and PC through Ethernet
- ▶ Flexible integration with various AIS compatible radar and chart plotters
- ► AIS Viewer software for PC (Standard supply)
- Sturdy design mounts easily on a bulkhead

# nexchange that can be utilized



### Information to be received -

### **Dynamic Data**

- Ship's position
- Coordinated universal time (UTC)
- Course over ground (COG)
- Speed over ground (SOG)
- Rate of turn (ROT)
- Heading
- Navigation status\*

#### **Static Data**

- MMSI (Maritime Mobile Service Identity)
- IMO number\*
- Ship's name
- Type of ship
- Call sign
- Length and beam
- Location of position-fixing antenna on the ship

### Voyage Related Data

- Ship's draft\*
- Hazardous cargo
- Destination and ETA\*

#### Safety-related messages

\* Class-A AIS only

## Information to be transmitted

# **Dynamic Data**

- Ship's position
- Coordinated universal time (UTC)
- Course over ground (COG)
- Speed over ground (SOG)
- Heading

### Static Data


- MMSI (Maritime Mobile Service Identity)
- Ship's name
- Type of ship
- Cargo
- Call sign

#### Length and beam

Location of position-fixing antenna on the ship

# Fixed form of safety-related messages



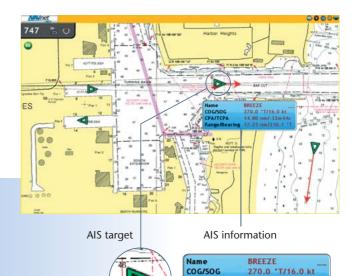



When placing a cursor onto the AIS target, an AIS data window will pop up to display the following data of the target: Ship's name, COG, SOG, CPA, TCPA, Range and Bearing.



NavNet vx2 can also be interfaced to the FA-30 **MAV**net<sup>\*</sup>

270.0 °T/16.0 ki 14.80 nm/-32m44s 17.25 nm/210.1 \*T



# AIS Viewer for PC (Standard supply)


The software can be upgraded to a full version of MaxSea Navigation Software or MaxSea-NavNet Software.




#### AIS info on NOAA chart

Rough raster chart is already installed. Also, additional charts can be installed into this viewer.

COG/SOG vector



AIS target data for the selected vessel





### Radar FR-8xx2 series

When interfacing with FR-8xx2 series, optional AIS interface IF-1500AIS is needed. AIS target




AIS information

## AIS target symbol

COG/SOG vector changes its length according to SOG.

ROT mark is viewable when the target vessel sends the information.

Past track dots enables you to evaluate the target's action.



#### SPECIFICATIONS OF



#### **STANDARDS**

IMO MSC.140(76), IEC 62287-1, ITU-R M.1371-2, DSC ITU R M.825-3, IEC 60945 Ed.4

#### TRANSPONDER UNIT

156.025 MHz to 162.025 MHz TX/RX Frequency

#### **GPS RECEIVER**

**Receiving Channels** 12 channels parallel, 12 satellites tracking

1575.42 MHz **Rx Frequency** C/A code **Rx Code** 10 m (HDOP≤4) **Position Accuracy** 

#### **INTERFACE**

COM RS-422/IEC 61162-1 **Ethernet** 10/100BASE-T

Input: ACK, BBM, DTM, GBS, GGA, GLL, GNS, HDT,

OSD, RMC, SSD, VBW, VSD, VTG, AIQ, DSC,

Output: VDM, VDO, ABK, ACA, ACS, ALR, TXT, PFEC

**POWER SUPPLY** 12-24 VDC 2.0-1.0 A

#### **ENVIRONMENT**

#### **Temprature**

Transponder Unit: -15 to +55°C Antenna Unit: -30 to +70°C

Waterproofing

Transponder Unit: IP20 Antenna Unit: IPx6

#### **EOUIPMENT LIST**


#### Standard

- 1. AIS Transponder FA-50
- 2. GPS Antenna GPA-017S or GPS/VHF Combined Antenna GVA-100-T with Distribution Box DB-1 (Optional VHF antenna is needed.)
- 3. AIS Viewer FAISPC-MX
- 4. Installation Materials and Spare Parts

#### Option


- 1. VHF Antenna 150M-W2VN
- 2. Antenna Cable Set (30/50 m)
- 3. Antenna Base
- 4. Power Supply Unit PR-240
- 5. LAN Cable (2/10 m) for the connection with a PC
- 6. LAN Cable (1/5/10/20/30 m) for the connection with NavNet vx2

#### **AIS TRANSPONDER FA-50**

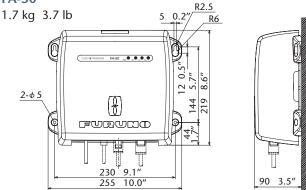


#### **GPS/VHF Combined Antenna GVA-100-T**

3.3 kg 7.3 lb

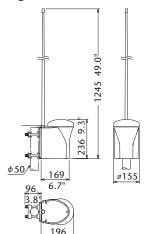


### **GPS Antenna GPA-017S**

0.15 kg 0.3 lb



#### INTERCONNECTION DIAGRAM

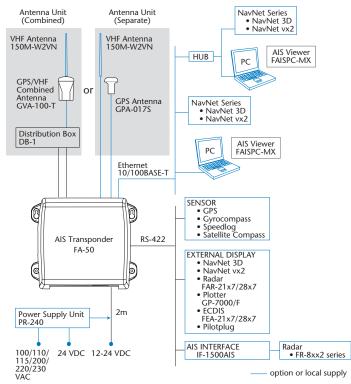

- \* Usually FA-50 uses the internal GPS. When connecting the external GPS, use one which satisfies the followings.

  1) Outputs DTM sentence. (WGS-84 can be chosen.)
- 2) Outputs GBS sentence.
- 3) Outputs sentences with the mode indicator; GNS: Ver. 3.0 or later GLL: Ver. 2.0 or later GGA: Ver. 2.0 or later RMC: Ver. 1.5 or later 4) The measured result of internal and external GPSs should be within 26 m. (These antenna should be located within 6 m.)

TRADEMARK REGISTERED MARCA REGISTRADA SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE

#### FURUNO ELECTRIC CO., LTD.

Nishinomiya, Hyogo, Japan Phone: +81 (0)798 65-2111 Fax: +81 (0)798 65-4200, 66-4622 **FURUNO U.S.A., INC.** 

Camas, Washington, U.S. Phone: +1 360-834-9300 Fax: +1 360-834-9400

#### **FURUNO (UK) LIMITED**

Havant, Hampshire, U.K. Phone: +44 23 9244 1000 Fax: +44 23 9248 4316

#### **FURUNO FRANCE S.A.**

Bordeaux-Mérignac, France Phone: +33 5 56 13 48 00 Fax: +33 5 56 13 48 01

# **FURUNO ESPAÑA S.A.**

Madrid, Spain Phone: +34 91-725-90-88 Fax: +34 91-725-98-97 **FURUNO DANMARK AS** 

#### Hvidovre, Denmark Phone: +45 36 77 45 00 Fax: +45 36 77 45 01

#### **FURUNO NORGE A/S**

Ålesund, Norway Phone: +47 70 102950 Fax: +47 70 102951

# **FURUNO SVERIGE AB** Västra Frölunda, Sweder Phone: +46 31-7098940 Fax: +46 31-497093

**FURUNO FINLAND OY** Espoo, Finland Phone: +358 9 4355 670

Fax: +358 9 4355 6710

#### FURUNO POLSKA Sp. Z o.o.

Gdynia, Poland Phone: +48 58 669 02 20 Fax: +48 58 669 02 21

Fax: +7 812 766 55 52

**FURUNO DEUTSCHLAND GmbH** 

# Rellingen, Germany Phone: +49 4101 838 0 Fax: +49 4101 838 111

LLC "FURUNO EURUS" St. Petersburg, Russian Federation Phone: +7 812 767 15 92



07125U Printed in Japan Catalogue No. N-868

